

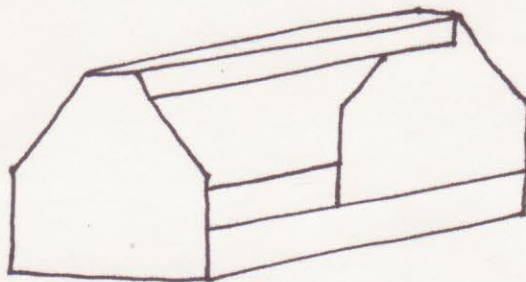
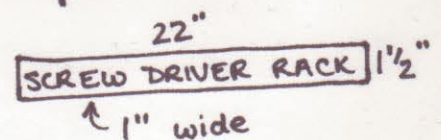


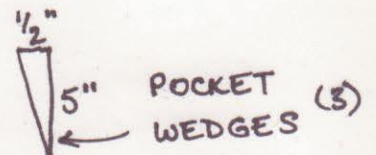
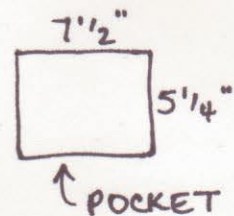



TOOL BOX

Home on 129 Acres

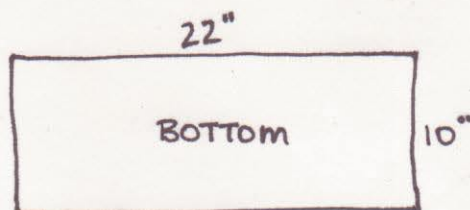

* screwdriver rack,
blade partition &
end "pocket" not
shown in drawing

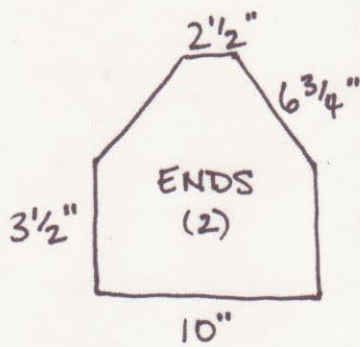

- Bottom & end pieces should be 1/2" thick
- Sides, pocket & blade partition can be 1/4" thick
- Handle should be 2x2. Screw driver rack should be 1x1 1/2".
- Bottom goes inside end pieces. Sides go outside ends & bottom.
- Cut ~~1/4" x 1/8"~~ groove for blade partition on one side of each end piece 1/4" wide by 1/8" deep 2" in from the edge.
- Drill 12 holes approx 1 1/2" apart through the screw driver rack. Attach 2 1/2" in from edge (along inside of the groove for the blade partition).
- Pocket aligns with the bottom edge of the toolbox.

